

Quick Start Guide



Step 1

Find a suitable location for your Linxdot.

We suggest positioning the antenna against a window for better coverage.

Step 2

Connect the power supply and the included antenna to your Linxdot but don't turn it on yet.

We suggest using the optional Ethernet port where possible.



Step 3




Download the Helium Hotspot app.



Step 4

Activate your Linxdot.

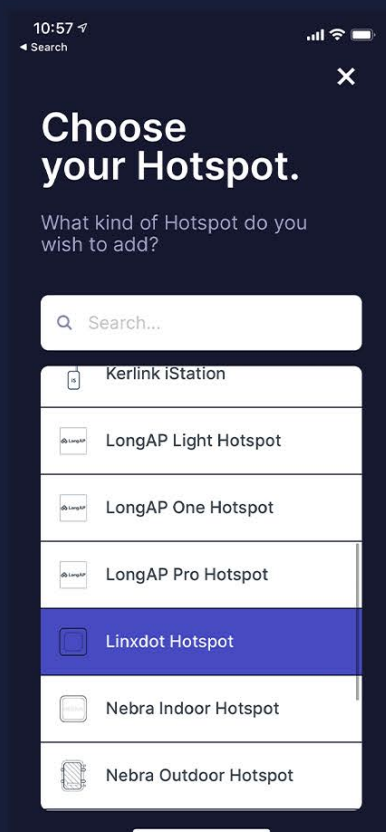

Select the **Linxdot Hotspot** from the list.



Agree to diagnostics and power on your Linxdot.



Scan for your Linxdot and select it once found.



Documentation: www.linxdot.com/support
Contact us: hello@linxdot.com

Designed by Linxdot in London, UK. Assembled in China.